

Van Gogh Chevron Installation Tips

Please see our full gluedown installation guidelines for subfloor preparation

Good subfloor preparation is essential for a trouble-free installation. The appearance will only be as good as the quality of the subfloor over which it is installed. Any irregularities in the subfloor will show through the finished floor and must be removed before installation.

Ensure at least 24 hours prior to installation, that flooring materials are removed from packaging and rested flat. Allow to condition in the room where the installation is to take place. Room temperature and product should be kept between 18-27°C (64-81°F).

We recommend dry laying a few tiles to ensure the creation of the correct layout before permanently adhering.

Installation notes

1. Locate the centre of the room and draw a line A-B down the entire length of the room. Divide this line at the centre point making sure it is perpendicular to the original line. Then extend this line across the full width of the room C-D.
2. Dry lay the chevrons as shown in either (Fig. 1) or (Fig. 2) which ever gives the best appearance – one will work better than the other at the room perimeter.
3. Adhere all the remaining full tiles across the entire floor leaving all cut tiles around the perimeter unadhered. Dry lay perimeter cut tiles before adhering.

Fig. 1


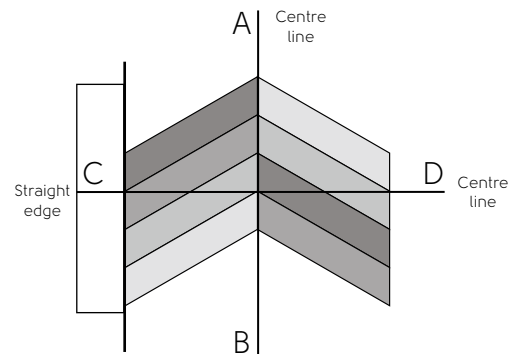


Fig. 2



If at the end of the installation there are any very minor visual irregularities, these can be rectified with the use of a round tipped awl.

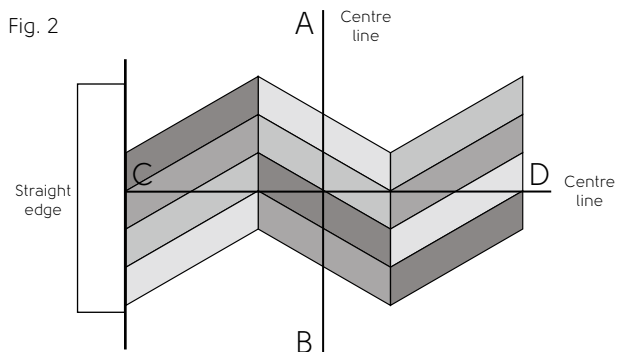

Scan here to view
our full gluedown
installation guidelines